


INSTRUCTION SHEET FOR WIND DIRECTIONAL CAP

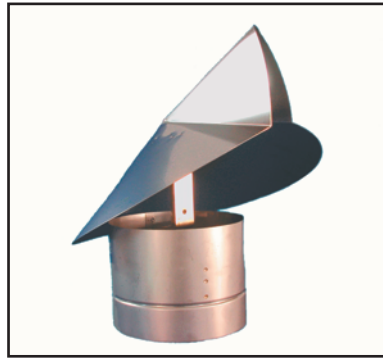

Wind Directional Cap



Wind Cap Adapter



Adjustable Tile Adapter

CAUTION:

The sheet metal of this product is sharp and can cause cuts. Wear gloves or other protection when working with this or any sheet metal products. Clean your flue and cap regularly.

.....

FOR SINGLE WALL PIPE

1. Remove all parts from the carton to insure that the unit is complete. There should be (1 ea.) round base with swing jack, (1 ea.) rotating hood and (1 ea.) package of wing nuts.
 2. Remove the two wing nuts from the package and have them ready to install.
 3. Place the rotating hood on the swing jack so that the bolts fit into the holes provided and tighten into place with the wing nuts. (NOTE: the two bolts are of different sizes so that the hood will fit only one way.)
 4. Spin the hood to insure that there is proper rotation and proper clearance on all sides.
 5. Place the Wind Directional Cap on the chimney pipe and push down until top of pipe reaches the groove in the round base of the cap. Use self tapping sheet metal screws (not provided) to secure the cap to the pipe. (NOTE: If you are attaching this cap to double or triple wall pipe you must use a Wind Cap Adapter to attach the cap. (SEE BELOW)
-

FOR MULTI WALL PIPE

1. Follow steps 1 through 4 above. Use Wind Cap Adapter to attach cap to chimney pipe.
 2. There are two beads near one end of the tube. The other end away from the beads is the long end of the adapter. Place the long end of the adapter into the interior pipe of the chimney. This end is long enough to be secure without the use of any screws.
 3. Slide the round storm collar over the tube to the first bead. Slide the Wind Directional Cap over the tube to the storm collar and secure with self tapping screws (not provided).
-

FOR CHIMNEY TILE

1. Follow steps 1 through 4 above. Attach the ATA to the chimney tile with the drawband and the WDC to the round collar of the ATA using self tapping sheet metal screws.
-

The FAMCO guarantee does not cover any damage caused by neglect, accident or overload, improper installation, nor does it cover the cost of repairs made or attempted outside the factory without written authorization from FAMCO.