


INSTALLATION INSTRUCTIONS FOR J-VENTS ON METAL WITH AND WITHOUT EXTENSION



The installation of the FAMCO J-Vent is similar to any other roof mounted vent with flashing. Follow these instructions or the National Roofing Contractors Assoc. guidelines :

- 1) Make sure that the area of the roof where the J-Vent is to be mounted is clear of any obstructions and is clean and dry (roof trusses, electrical wiring, etc. [NOTE: DO NOT cut any roof trusses, electrical wiring, etc.]).
- 2) Cut a round hole in the roof 1/2" larger than the diameter of the J-Vent throat. Lay a 1/2" bead (width to depth ratio should be equal) of water block caulking around hole and on the underside of the J-Vent flashing about 1/4" from outer edge.
- 3) Place J-Vent so that it is centered over the hole you just cut and press into place to spread caulk. (If this model has an extension be sure that it is placed so that you have approximately equal clearance on all sides of hole.)
- 4) Screw flashing down to roof being sure that all screws are pulled down snug but not stripped. {Screws should be placed so that they go through the caulking bead on the flashings underside - approximately 1/2" to 3/8" from flashings edge}.
- 5) If you are attaching ducting for exhaust/intake purposes please follow local or state codes in attaching it to this J-Vent. (Some state codes call for solid ducting while other allow flex, etc.)

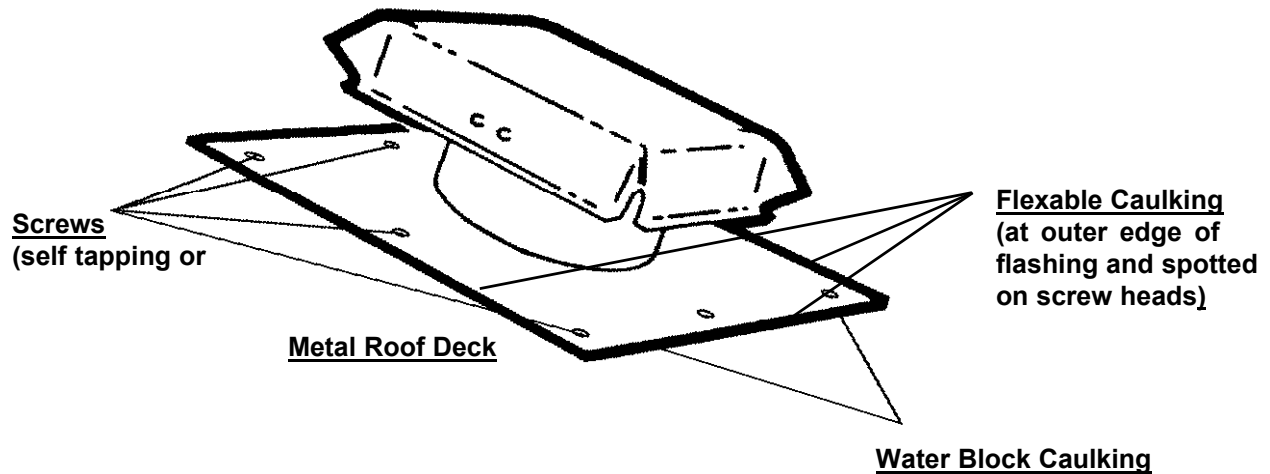

FRESH AIR MANUFACTURING CO.

MERIDIAN, ID