


INSTALLATION INSTRUCTIONS FOR J-VENTS

WITH AND WITHOUT EXTENSION

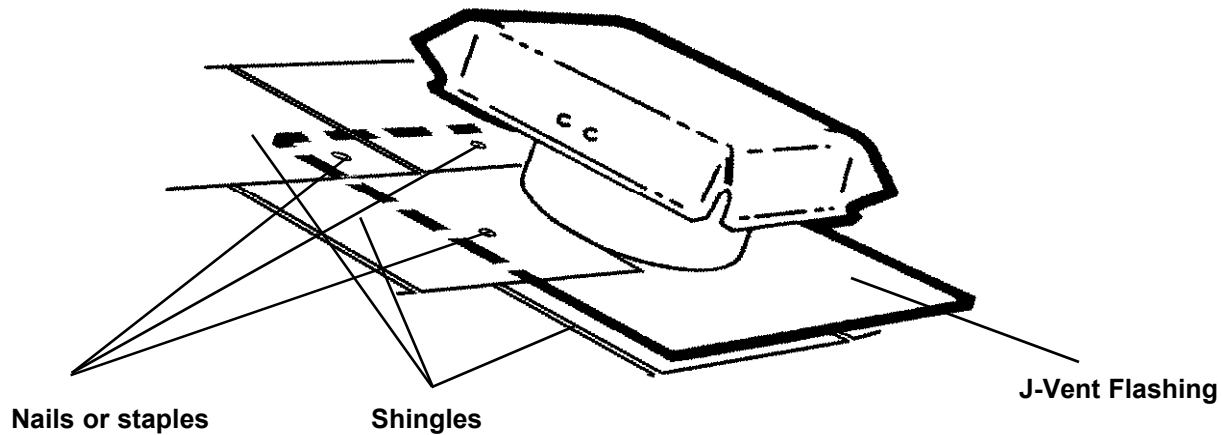

The installation of the FAMCO J-Vent is similar to any other roof mounted vent with flashing. Follow these instructions:

- 1) Make sure that the area of the roof where the J-Vent is to be mounted is clear of any obstructions (roof trusses, electrical wiring, etc. [NOTE: DO NOT cut any roof trusses, electrical wiring, etc.]).
- 2) Cut a round hole in the roof 1/2" larger than the diameter of the J-Vent throat. {For RETROFIT: then loosen shingles so that J-Vent flashing can be slipped under them.}
- 3) Place J-Vent so that it is centered over the hole you just cut. If this model has an extension be sure that it is placed so that you have approximately equal clearance on all sides. {For RETROFIT: place J-Vent so that the flashing slides under the shingles from the bottom edge of the hole up and that it is on top of the shingles from the bottom edge of the hole down..}
- 4) Nail or staple flashing down to roof being sure that all nails or staples are placed under the shingles. { NOTE: DO NOT nail or staple the exposed flashing areas, this will cause roof leaks and water damage.}
- 5) If you are attaching ducting for exhaust/intake purposes please follow local or state codes in attaching it to this J-Vent. (Some state codes call for solid ducting while other allow flex, etc.)



FRESH AIR MANUFACTURING CO.